## **Update Notification**

## If you are using firmware version is lower than the Y1.0.17.

You have to update the bridge FW first.

Please download your NVR machine type's bridge firmware.

Then open the NVR webpage, Enter the System  $\rightarrow$  System Update page.

And use the "Firmware Upgrade" Function to update your NVR machine.

When machine is updating, Please do not remove the power.

The update progress finish, NVR machine will be auto reboot.

After update the bridge firmware then Please update the FW Y1.0.23.

Then you can upgrade to the newest version.

## If your firmware version is lower than the Y1.0.23.

Please update to FW Y1.0.23 first, then you can upgrade to the newest version.